

MAINTENANCE ITEM		MAINTENANCE INTERVAL (Number of months or km (mi), whichever occurs first)																								
		Months x 1,000 km x 1,000 mi	6 9.6 6	12 19.2 12	18 28.8 18	24 38.4 24	30 48.0 30	36 57.6 36	42 67.2 42	48 76.8 48	54 86.4 54	60 96.0 60	66 105.6 66	72 115.2 72	78 124.8 78	84 134.4 84	90 144.0 90	96 153.6 96	102 163.2 102	108 172.8 108	114 182.4 114	120 192.0 120	126 201.6 126	132 211.0 132	REMARKS	
1	Engine oil		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Note 1
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Note 1
3	Spark plug											R											R			
4	Drive belt(s)					I						I					I						I			
5	Timing Belt (WRX/WRX STI)																	R								
6	Fuel systems, lines & connections					I						I					I						I			Note 6 & 7
7	Fuel filter													R												Note 2 & 7
8	Air cleaner element					R						R					R						R			Note 8
9	Cooling system, hoses & connections					I						I					I						I			Note 10
10	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																						Note 10	
11	Clutch operation		I		I		I		I		I		I		I		I		I		I		I		I	
12	Transmission gear oil (except BRZ)					I						I					I						I			Note 3
	Transmission gear oil (BRZ)				I				I					I			I						I			
13	CVT fluid (except BRZ)					I						I					I						I			Note 4
	ATF (BRZ)					I					R						I						R			
14	Front & rear differential gear oil (except BRZ)					I						I					I						I			Note 3
	Rear differential gear oil (BRZ)		I		I		I		I		I		I		I		I		I		I		I		I	
			Replace every 4 years or 96,000 km (60,000 miles)																							
15	Brake lines, operation of parking & service brake systems		I		I		I		I		I		I		I		I		I		I		I		I	Note 6
16	Brake fluid / clutch fluid (MT Only)					R						R					R						R			Note 5
17	Disc brake pad & disc, front & rear axle boots & joints		I		I		I		I		I		I		I		I		I		I		I		I	Note 6
18	Steering & suspension		I		I		I		I		I		I		I		I		I		I		I		I	Note 6
19	Wheel bearing											I											I			
20	Rotate & inspect tires	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	Note 9
21	HVAC system A/C filter		R		R		R		R		R		R		R		R		R		R		R		R	Note 8

R=Replace. I=Inspect, correct or replace if necessary. P=Perform.